

(1) From March 15 through November 15, the draw will open on signal for all vessels except that from 11 p.m. to 5 a.m. at least 2½ hours notice will be required.

(2) At all times, from November 16 through March 14, the draw will open on signal if at least 2½ hours notice is given.

(3) When notice is required, the owner operator of the vessel must provide the train dispatcher with an estimated time of passage by calling (717) 215-0379 or (609) 412-4338.

(b) The draw of the SR 13 Bridge, mile 39.6 in Seaford, shall open on signal, except from 6 p.m. to 8 a.m., from April 1 through October 31; from November 1 through March 31, Monday to Friday, and on Saturday and Sunday from 3:30 p.m. to 7:30 a.m., if at least four hours notice is given.

[CGD05-06-044, 71 FR 53325, Sept. 11, 2006]

§ 117.245 Smyrna River.

The draw of the Delaware highway bridge, mile 4.0 at Flemings Landing, shall open on signal if at least 24 hours notice is given.

DISTRICT OF COLUMBIA

§ 117.253 Anacostia River.

(a) The draw of the Frederick Douglass Memorial (South Capitol Street) bridge, mile 1.2, shall open on signal if at least 24 hours notice is given. The draw is closed to the passage of vessels on each Presidential Inauguration Day and may occasionally be closed without advance notice to permit uninterrupted transit of dignitaries across the bridge.

(b) The CSX Railroad Bridge, mile 3.4.

(1) The draw of the bridge to be operated by the controller at the Benning Yard office shall open on signal:

(i) At all times for public vessels of the United States, state and local government vessels, commercial vessels and any vessels in an emergency involving danger to life or property.

(ii) Between 9 a.m. and 12 p.m. and between 1 p.m. and 6 p.m. from May 15 through September 30.

(iii) Between 6 p.m. and 7 p.m. from May 15 through September 30 if notice is given to the controller at the

Benning Yard office not later than 6 p.m. on the day for which the opening is requested.

(iv) At all other times, if at least eight hours notice is given to the controller at the Benning Yard office.

(2) The CSX Railroad Bridge shall not be operated by the controller at the Benning Yard office in the event of failure or obstruction of the motion sensors, laser scanners, video cameras or marine-radio communications. In these situations, a bridge tender must be called to operate the bridge on-site.

(3) Except as provided in §117.31(b), opening of the draw shall not exceed ten minutes after clearance of rail traffic.

(4) A horn will sound one prolonged blast followed by one short blast to indicate that the CSX Railroad Bridge is moving to the full open position for vessel traffic. During open span movement, the channel traffic lights will flash red until the bridge is in the full open position to vessels. In the full open position to vessels, the bridge channel traffic lights will flash green.

(5) A horn will sound five short blasts, the channel traffic lights will flash red, and an audio voice-warning device will announce bridge movement during closing span movement. Five short blasts of the horn will continue until the bridge is seated in and locked down. When the bridge is seated and in locked down position to vessels, the channel traffic lights will continue to flash red.

(6) The owners of the bridge shall provide and keep in good legible condition two board gauges painted white with black figures not less than six inches high to indicate the vertical clearance under the closed draw at all stages of the tide. The gauges shall be placed on the bridge so that they are plainly visible to the operator of any vessel approaching the bridge from either upstream or downstream.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984; 49 FR 37381, Sept. 24, 1984, as amended by CGD5-88-004, 53 FR 9627, Mar. 23, 1988; CGD05-95-081, 61 FR 57586, Nov. 7, 1996; CGD05-04-028, 69 FR 47773, Aug. 6, 2004]