

§ 116.1120

(1) The bulwarks do not form a well enclosed on all sides; and

(2) The foredeck of the vessel has sufficient sheer to ensure drainage aft.

§ 116.1120 Drainage of cockpit vessels, well deck vessels, and open boats.

Drainage of cockpit vessels, well deck vessels, and open boats must meet the applicable requirements of §§ 178.420, 178.430, 178.440, 178.450 in subchapter T of this chapter.

§ 116.1160 Watertight integrity.

(a) A hatch exposed to the weather must be watertight, except that the following hatches may be weather-tight:

(1) A hatch on a watertight trunk that extends at least 305 millimeters (12 inches) above the weather deck;

(2) A hatch in a cabin top; and

(3) A hatch on a vessel that operates only on protected waters.

(b) A hatch cover must:

(1) Have securing devices; and

(2) Be attached to the hatch frame or coaming by hinges, captive chains, or other devices of substantial strength to prevent its loss.

(c) A hatch cover that provides access to accommodation spaces must be operable from either side.

(d) A weathertight door must be provided for each opening located in a deck house or companionway. Permanent watertight coamings must be provided as follows:

(1) On a vessel on an exposed or partially protected route, a watertight coaming with a height of at least 150 millimeters (6 inches) must be provided under each weathertight door in a cockpit or a well, or on the main deck of a flush deck vessel.

(2) On a vessel on a protected route, a watertight coaming with a height of at least 75 millimeters (3 inches) must be provided under each weathertight door in a cockpit or a well.

(3) The height of the watertight coaming for a hinged watertight door, need only be sufficient to accommodate the door.

46 CFR Ch. I (10–1–11 Edition)

Subpart L—Ballast Systems

§ 116.1200 Ballast.

(a) Any solid fixed ballast used to comply with the requirements of Parts 170 and 171 in subchapter S of this chapter must be:

(1) Stowed in a manner that prevents shifting of the ballast; and

(2) Installed to the satisfaction of the cognizant OCMI.

(b) Solid fixed ballast may not be located forward of the collision bulkhead unless the installation and arrangement of the ballast and the collision bulkhead minimizes the risk of the ballast penetrating the bulkhead in a collision.

(c) Solid fixed ballast may not be removed from a vessel or relocated unless approved by the cognizant OCMI except that ballast may be temporarily moved for a vessel examination or repair if it is replaced to the satisfaction of the OCMI.

(d) Water ballast, either as an active system or permanent, must be approved by the Commanding Officer, Marine Safety Center.

PART 117—LIFESAVING EQUIPMENT AND ARRANGEMENTS

Subpart A—General Provisions

Sec.

117.10 Applicability to vessels on an international voyage.

117.15 Applicability to existing vessels.

117.25 Additional requirements.

Subpart B—Emergency Communications

117.64 Emergency Position Indicating Radiobeacons (EPIRB).

117.68 Distress flares and smoke signals.

Subpart C—Ring Life Buoys and Life Jackets

117.70 Ring life buoys.

117.71 Life jackets.

117.72 Personal flotation devices carried in addition to life jackets.

117.75 Life jacket lights.

117.78 Stowage of life jackets.

Subpart D—Survival Craft Arrangements and Equipment

117.130 Stowage of survival craft.

117.137 Stowage of life floats and buoyant apparatus.