

Coast Guard, DHS

§ 117.237

(b) As soon as practicable for all other vessels but no later than 20 minutes after the signal to open is given.

[CGD 82-025, 49 FR 43459, Oct. 29, 1984, as amended by USCG-2001-10881, 71 FR 70309, Dec. 4, 2006]

§ 117.225 Yellow Mill Channel.

The drawspan of the Stratford Avenue Bridge, mile 0.3 at Bridgeport, must open on signal if at least 24-hours notice is given. Public vessels of the United States must pass through as soon as possible.

[USCG-2001-10881, 71 FR 70310, Dec. 4, 2006]

DELAWARE

§ 117.231 Brandywine Creek.

The draw of the Conrail bridge, mile 1.1, the Church Street bridge, mile 1.3, and the Sixteenth Street bridge, mile 1.7, all at Wilmington, need not be opened for the passage of vessels.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD3 85-42, 50 FR 26712, June 28, 1985]

§ 117.233 Broad Creek.

(a) The draw of the Conrail Bridge, mile 8.0 at Laurel, shall open on signal if at least four hours notice is given.

(b) The draws of the Poplar Street Bridge, mile 8.2, and the U.S. 13A Bridge, mile 8.25, both at Laurel, need not open for the passage of vessels.

[CGD05-06-044, 71 FR 53325, Sept. 11, 2006, as amended by USCG-2013-0778, 79 FR 15688, Mar. 21, 2014]

§ 117.234 Cedar Creek.

The SR 36 Bridge, mile 0.5 in Cedar Beach, shall open on signal. From April 1 through November 30 from 2 a.m. to 4 a.m.; and from December 1 through March 31 from 6:30 p.m. to 6 a.m., the draw shall open on signal if at least four hours notice is given.

[CGD05-06-044, 71 FR 53325, Sept. 11, 2006]

§ 117.235 Chesapeake and Delaware Canal.

The draw of the Conrail bridge, mile 7.7, shall open on signal. The following light signals, located in the center of the drawspan on both sides of the bridge, shall be used:

(a) When the draw is to be opened immediately, one fixed amber light.

(b) When the draw is not ready to be opened, one flashing red light.

§ 117.237 Christina River.

(a) The owners of the bridges on this waterway:

(1) Shall provide and keep in good legible condition two board gages painted white with black figures not less than six inches high to indicate the vertical clearance under the closed draw at all stages of the tide. The gages shall be so placed on the bridges that they are plainly visible to the operator of each vessel approaching the bridge either up or downstream.

(2) Shall open on signal except that the draw of a railroad bridge need not be opened when a train is in the bridge block, approaching the bridge, or within 5 minutes of the passage of a passenger train; but in no event shall the opening of the draw be delayed more than 10 minutes.

(b) The draw of the Norfolk Southern Railroad Bridge, mile 1.4 at Wilmington, shall operate as follows:

(1) The draw shall remain in the open position for navigation. The draw shall only be closed for train crossings or periodic maintenance authorized in accordance with subpart A of this part.

(2) The bridge shall be operated by the controller at the Harrisburg, PA Dispatcher's Office. The controller shall monitor vessel traffic with closed circuit cameras and infrared sensors covering the swing radius. Operational information will be provided 24 hours a day on marine channel 13 and via telephone (717) 541-2140.

(3) The bridge shall not be operated from the remote location in the following events: Failure or obstruction of the infrared sensors, closed-circuit cameras or marine-radio communications, or anytime controller's visibility is inhibited. In these situations, a bridge tender with Norfolk Southern must be called and on-site within 30 minutes.

(4) Before the bridge closes for any reason, the remote operator will monitor waterway traffic in the area. The bridge shall only be closed if the off-site remote operator's visual inspection shows that the channel is clear