

Coast Guard, DHS

§ 117.1051

the bridge with radio communication equipment in operation.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD13 84-13, 49 FR 35628, Sept. 11, 1984; CGD13-95-011, 62 FR 43097, Aug. 12, 1997; USCG-2012-0074, 77 FR 28769, May 16, 2012]

§ 117.1047 Hoquiam River.

(a) When fog prevails by day or night, the drawtender of each bridge listed in this section, after giving the acknowledging signal to open, shall toll a bell continuously during the approach and passage of vessels.

(b) The draw of the Puget Sound and Pacific railroad bridge, mile 0.3 at Hoquiam, shall be maintained in the fully open position except for the passage of trains or for maintenance. When the draw of the bridge is closed and the visibility at the drawtender's station is less than one mile up or down the channel, the drawtender shall sound two long blasts every minute. When the draw is reopened, the drawtender shall sound one long blast followed by one short blast.

(c) The draw of the Simpson Avenue Bridge, mile 0.5, at Hoquiam, shall open on signal if at least one hour notice is given by telephone to the Washington State Department of Transportation. The opening signal is two prolonged blasts followed by one short blast.

(d) The draw of the Riverside Avenue Bridge, mile 0.9, at Hoquiam, shall open on signal if at least one hour notice is given by telephone to the Washington State Department of Transportation. The opening signal is two prolonged blasts followed by two short blasts.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD13 84-11, 49 FR 46548, Nov. 27, 1984; CGD13 85-15, 51 FR 2395, Jan. 16, 1986; CCGD13-93-019, 58 FR 44613, Aug. 24, 1993; USCG-2008-1095, 74 FR 12552, Mar. 25, 2009; USCG-2014-1029, 80 FR 18116, Apr. 3, 2015]

§ 117.1049 Lake Washington.

The draw of the Evergreen Point Floating Bridge between Seattle and Bellevue shall operate as follows:

(a) The draw shall open on signal if at least two hours notice is given.

(b) Telephone requests for bridge opening may be directed as collect

calls to the Highway Radio or made by direct telephone communication through the Seattle Marine Operator, Station KOH, or through other marine wire or radiotelephone service.

(c) The draw need not be opened from 5 a.m. to 9 p.m. Monday through Friday, except for all Federal holidays other than Columbus Day.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD13 84-13, 49 FR 35628, Sept. 11, 1984; CGD13-94-039, 60 FR 54434, Oct. 24, 1995]

§ 117.1051 Lake Washington Ship Canal.

(a) When fog prevails by day or by night, the drawtender of each bridge listed in this section, after giving the acknowledging signal to open, shall toll a bell continuously during the approach and passage of vessels.

(b) All non-self-propelled vessels, craft, or rafts navigating this waterway for which the opening of any draw is necessary shall be towed by a suitable self-propelled vessel while passing the draw.

(c) The draw of the Burlington Northern Santa Fe railroad bridge, mile 0.1, shall open on signal.

(d) The draws of the Ballard Bridge, mile 1.1, Fremont Bridge, mile 2.6, and University Bridge, mile 4.3, shall open on signal, except that:

(1) The draws need not be opened for a period of up to 10 minutes after receiving an opening request, if needed to pass accumulated vehicular traffic. However, the draws shall open without delay, when requested by vessels engaged in towing operations.

(2) The draws need not open from 7 a.m. to 9 a.m. and from 4 p.m. to 6 p.m. Monday through Friday, except all Federal holidays but Columbus Day for any vessel of less than 1000 tons, unless the vessel has in tow a vessel of 1000 gross tons or over.

(3) Between the hours of 11 p.m. and 7 a.m. the draws shall open if at least one hour notice is given by telephone, radiotelephone, or otherwise to the drawtender at the Fremont Avenue Bridge.

(e) The draw of the Montlake Bridge, mile 5.2, shall open on signal, except that:

§ 117.1053

33 CFR Ch. I (7-1-16 Edition)

(1) The draw need not open for a period of up to 10 minutes after receiving an opening request, if needed to pass accumulated vehicular traffic. However, the draw shall open without delay, when requested by vessels engaged in towing operations.

(2) For any vessel or watercraft of less than 1,000 gross tons, unless the vessel has in tow a vessel of 1,000 gross tons or over, from Monday through Friday, except Federal Holidays:

(i) The draw need not open from 7 a.m. to 9 a.m. and from 3:30 p.m. to 6:30 p.m. from April 30 to September 1 and from 7 a.m. to 10 a.m. and from 3:30 p.m. to 7 p.m. from September 1 to April 30.

(ii) The draw need open only on the hour and half hour from 12:30 p.m. to 3:30 p.m. and from 6 p.m. to 6:30 p.m.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984, as amended by CGD 82-025, 49 FR 26722, June 29, 1984; CGD13 84-13, 49 FR 35628, Sept. 11, 1984; CGD13 86-02, 51 FR 18788, May 22, 1986; CGD 13 88-03, 53 FR 10535, April 1, 1988; CGD13 89-06, 54 FR 52798, Dec. 22, 1989; CGD 96-026, 61 FR 33664, June 28, 1996; CGD13-99-005, 66 FR 33026, June 20, 2001; CGD13-02-012, 68 FR 53051, Sept. 9, 2003]

§ 117.1053 Lewis River.

The draw of the Burlington Northern Santa Fe railroad bridge, mile 2.0 at Woodland, need not be opened for the passage of vessels.

§ 117.1055 Skagit River.

The draws of all bridges across the Skagit river need not be opened for the passage of vessels. However, the draws shall be returned to operable condition within one year after notification by the District Commander to do so.

§ 117.1057 Skamokawa Creek.

The draw of the Washington State highway bridge at Skamokawa need not be opened for the passage of vessels.

[CGD 82-025, 49 FR 17452, Apr. 24, 1984; 49 FR 43463, Oct. 29, 1984]

§ 117.1058 Snake River.

(a) The draw of the Burlington Northern Santa Fe railroad bridge across the Snake River at mile 1.5 between Pasco and Burbank is automated

and is normally maintained in the fully open to navigation position.

(b) *Lights.* All lights required for automated operation shall be visible for a distance of at least 2 miles and shall be displayed at all times, day and night.

(1) When the draw is fully open, a steady green light shall be displayed at the center of the drawspan on both upstream and downstream sides.

(2) When the draw is not fully open, a steady red light shall be displayed at the center of the drawspan on both upstream and downstream sides.

(3) When the draw is about to close, flashing yellow lights in the form of a down-pointing arrow shall be displayed at the center of the drawspan on both upstream and downstream sides.

(4) A similar set of red, green, and yellow lights shall be displayed on a remote lighting panel located near the north end, upstream side, of the Washington State highway bridge at mile 2.2. These lights shall be synchronized with the lights on the railroad bridge and shall be visible to vessels traveling downstream throughout the passage of the channel adjacent to Strawberry Island.

(c) *Operation.* When a train approaches the bridge, the yellow lights shall start flashing. After an eight-minute delay, the green lights shall change to red, the drawspan shall lower and lock, and the yellow lights shall be extinguished. Red lights shall continue to be displayed until the train has crossed and the drawspan is again in the fully open position. At that time, the red lights shall change green.

(d) Vessels equipped with radiotelephones may contact Burlington Northern Santa Fe to obtain information on the status of the bridge. Bridge status information also may be obtained by calling the commercial telephone number posted at the drawspan of the bridge.

[CGD13 84-05, 49 FR 43956, Nov. 1, 1984]

§ 117.1059 Snohomish River, Steamboat Slough, and Ebey Slough.

(a) Drawtenders of bridges listed in this section shall acknowledge sound signals as follows:

(1) When draw can be opened immediately, two prolonged blasts followed