

FEB 1 1941

U. S. DEPARTMENT OF COMMERCE

BUILDING
MATERIALS
AND
STRUCTURES

REPORT BMS63

Moisture Condensation in
Building Walls

by

HAROLD W. WOOLLEY

NATIONAL
BUREAU OF STANDARDS



Reference book not
taken from the

The program of research on building materials and structures, carried on by the National Bureau of Standards, was undertaken with the assistance of the Central Housing Committee, an informal organization of governmental agencies concerned with housing construction and finance, which is cooperating in the investigations through a committee of principal technicians.

CENTRAL HOUSING COMMITTEE ON RESEARCH, DESIGN, AND CONSTRUCTION

A. C. SHIRE, *Chairman*.
United States Housing Authority.

HOWARD P. VERMILYA, *Vice Chairman*.
Federal Housing Administration.

STERLING R. MARCH, *Secretary*.

PIERRE BLOUKE,
Federal Home Loan Bank Board.

JOHN S. DONOVAN,
Farm Security Administration.

HUGH L. DRYDEN,
National Bureau of Standards.

GEORGE W. TRAYER,
Forest Service (F. P. Laboratory).

LOUIS A. SIMON,
Public Buildings Administration.

JOSEPH M. DALLAVALLE,
Public Health Service.

LUTHER M. LEISENRING,
Construction Division (War).

GEORGE E. KNOX,
Yards and Docks (Navy).

EDWARD A. POYNTON,
Office of Indian Affairs.

WILLIAM R. TALBOTT,
Veterans' Administration.

WALLACE ASHBY,
Bureau of Agricultural Chemistry and Engineering.

NATIONAL BUREAU OF STANDARDS STAFF COMMITTEE ON ADMINISTRATION AND COORDINATION

HUGH L. DRYDEN, *Chairman*,
Mechanics and Sound.

PHAON H. BATES,
Clay and Silicate Products.

GUSTAV E. F. LUNDELL,
Chemistry.

HOBART C. DICKINSON,
Heat and Power.

ADDAMS S. MCALLISTER,
Codes and Specifications.

WARREN E. EMLEY,
Organic and Fibrous Materials.

HENRY S. RAWDON,
Metallurgy.

The Forest Products Laboratory of the Forest Service is cooperating with both committees on investigations of wood constructions.

[For list of BMS publications and directions for purchasing, see cover page III]

UNITED STATES DEPARTMENT OF COMMERCE · Harry L. Hopkins, Secretary
NATIONAL BUREAU OF STANDARDS · Lyman J. Briggs, Director

BUILDING MATERIALS *and* STRUCTURES

REPORT BMS63

Moisture Condensation in Building Walls

by

HAROLD W. WOOLLEY



ISSUED DECEMBER 14, 1940

The National Bureau of Standards is a fact-finding organization; it does not "approve" any particular material or method of construction. The technical findings in this series of reports are to be construed accordingly.

UNITED STATES GOVERNMENT PRINTING OFFICE · WASHINGTON · 1940
FOR SALE BY THE SUPERINTENDENT OF DOCUMENTS, WASHINGTON, D. C. · PRICE 10 CENTS

Foreword

This paper was prepared as a result of numerous requests for information on moisture condensation in insulated walls, which will occur under certain conditions. It discusses these conditions in a general way and makes available to architects, builders, and others information concerning factors which control the humidity in walls.

Available data relative to certain types of wall have been collected so that estimates can be made concerning the probability of moisture condensation in walls of dwellings if the factors governing such condensation, including design, structural materials, construction details, and moisture conditions inside and outside of the building are known.

The Forest Products Laboratory has made extensive studies of this problem in relation to frame construction, and their reports, given in the list of references at the end of this paper, may be consulted for specific experimental data.

LYMAN J. BRIGGS, *Director*.

Moisture Condensation in Building Walls

BY HAROLD W. WOOLLEY

CONTENTS

| | Page | | Page |
|--|------|--|------|
| Foreword..... | ii | III. Means of preventing condensation..... | 11 |
| I. Introduction..... | 1 | IV. Conclusions..... | 13 |
| II. General principles involved in condensation..... | 1 | V. References..... | 13 |

ABSTRACT

Moisture condensation in insulated walls will occur under certain conditions. This paper discusses these conditions in a general way and makes available to architects, builders, and others, information concerning factors which control humidity in walls. These factors are presented so as to make possible estimates of the probability of moisture condensation in walls of dwellings if the factors governing it such as design, structural materials, construction details, and moisture conditions inside and outside the building, are known.

I. INTRODUCTION

In recent years difficulties resulting from condensation of moisture, particularly within insulated walls of dwelling houses, have received considerable attention. When such condensation occurs to a sufficient degree, damage to the building structure or decorations may result. No definite statistics are available to indicate to what extent condensation is producing damaging results. However, a large number of cases of condensation have been reported, particularly in new houses in the colder parts of the country. Condensation problems are most frequent in houses of modern tight construction, with weather stripping, storm sash, insulation, and the newer types of heating systems that provide some means of humidification.

The principles involved in the condensation of moisture in building walls, though comparatively simple, are not understood by the average layman and not always by architects and builders. A general discussion of the principles of moisture condensation is therefore included in this paper, which may be helpful to

both the buying public and the builder. The discussion is based not so much on definite tests made at the National Bureau of Standards as on well-established facts derived from various sources.

II. GENERAL PRINCIPLES INVOLVED IN CONDENSATION

Atmospheric air always contains moisture. Generally the moisture is not seen because it is in the form of an invisible vapor. It can easily be made visible as liquid water by cooling the air. Thus in the summer water condenses as dew on the outside of a pitcher of cold water. If the condensation occurs below the freezing point, it is expected to be in the form of frost. The freezing coils of a refrigerator acquire such a deposit continually. Condensation of moisture is so common an occurrence that the principles governing it should be known to everyone.

A definite volume of air held at a fixed temperature can contain permanently no more than a definite amount of water in the form of vapor. This limiting quantity of water per given volume is termed "moisture content at saturation." If the air contains a greater proportion of moisture than this at the particular temperature, the water will start condensing on the surfaces of the container or even on the dust particles in the air which then fall out in a fine mist. The ratio of the actual moisture content to the saturation moisture content for the particular temperature is termed "relative humidity." It is customarily expressed in percent.

The concentration of water vapor may also be stated by giving its pressure. If water vapor is present, part of the atmospheric pressure is maintained by the water vapor and the remainder of the pressure by the other constituents of the atmosphere. At a particular temperature and at saturation the water vapor exerts a definite pressure. Data on pressure and density of saturated water vapor will be found in table 1. If the pressure of the water vapor at a particular temperature is less than the tabulated value the air is not saturated. The ratio of the actual pressure of the water vapor to the saturation pressure of water vapor for the particular temperature is also termed relative humidity. Its value when defined thus is essentially the same as that given previously. Throughout this paper, use is made of the last-named "relative humidity."

TABLE 1.—*Pressure and density of water vapor at saturation*

[Saturation vapor pressure for water, p , in pounds per square inch. Saturation vapor density for water, d , in grains * per cubic foot]

| Tem- pera- ture | p | d | Tem- pera- ture | p | d |
|-----------------------|----------|--------|-----------------------|---------|-------|
| $^{\circ}F$ | | | $^{\circ}F$ | | |
| -15 | 0.008230 | 0.2182 | 25 | 0.06405 | 1.558 |
| -14 | .009704 | .2303 | 26 | .06710 | 1.629 |
| -13 | .009201 | .2430 | 27 | .07034 | 1.704 |
| -12 | .009725 | .2562 | 28 | .07368 | 1.781 |
| -11 | .010276 | .2702 | 29 | .07717 | 1.862 |
| -10 | .010855 | .2845 | 30 | .08080 | 1.946 |
| -9 | .011464 | .3001 | 31 | .08458 | 2.033 |
| -8 | .012101 | .3158 | 32 | .08856 | 2.124 |
| -7 | .012775 | .3327 | 33 | .09230 | 2.203 |
| -6 | .013483 | .3505 | 34 | .09610 | 2.288 |
| -5 | .014226 | .3692 | 35 | .1000 | 2.376 |
| -4 | .015006 | .3883 | 36 | .1041 | 2.469 |
| -3 | .015825 | .4086 | 37 | .1083 | 2.563 |
| -2 | .016685 | .4299 | 38 | .1126 | 2.660 |
| -1 | .017586 | .4521 | 39 | .1171 | 2.760 |
| 0 | .018533 | .4750 | 40 | .1217 | 2.863 |
| 1 | .01953 | .500 | 41 | .1265 | 2.970 |
| 2 | .02057 | .525 | 42 | .1315 | 3.081 |
| 3 | .02166 | .552 | 43 | .1367 | 3.196 |
| 4 | .02281 | .580 | 44 | .1420 | 3.315 |
| 5 | .02401 | .609 | 45 | .1475 | 3.436 |
| 6 | .02527 | .640 | 46 | .1532 | 3.562 |
| 7 | .02658 | .672 | 47 | .1591 | 3.692 |
| 8 | .02796 | .705 | 48 | .1652 | 3.826 |
| 9 | .02941 | .740 | 49 | .1715 | 3.964 |
| 10 | .03092 | .776 | 50 | .1780 | 4.106 |
| 11 | .03251 | .814 | 51 | .1848 | 4.255 |
| 12 | .03418 | .854 | 52 | .1918 | 4.407 |
| 13 | .03590 | .896 | 53 | .1989 | 4.561 |
| 14 | .03772 | .939 | 54 | .2063 | 4.722 |
| 15 | .03961 | .984 | 55 | .2140 | 4.889 |
| 16 | .04160 | 1.031 | 56 | .2219 | 5.060 |
| 17 | .04369 | 1.081 | 57 | .2300 | 5.234 |
| 18 | .04586 | 1.132 | 58 | .2384 | 5.415 |
| 19 | .04812 | 1.185 | 59 | .2471 | 5.602 |
| 20 | .05048 | 1.242 | 60 | .2561 | 5.795 |
| 21 | .05296 | 1.299 | 61 | .2654 | 5.993 |
| 22 | .05555 | 1.361 | 62 | .2749 | 6.196 |
| 23 | .05826 | 1.423 | 63 | .2848 | 6.407 |
| 24 | .06111 | 1.489 | 64 | .2949 | 6.622 |

TABLE 1.—*Pressure and density of water vapor at saturation—Continued*

| Tem- pera- ture | p | d | Tem- pera- ture | p | d |
|-----------------------|--------|-------|-----------------------|--------|-------|
| $^{\circ}F$ | | | $^{\circ}F$ | | |
| 65 | 0.3054 | 6.845 | 78 | 0.4744 | 10.38 |
| 66 | .3162 | 7.074 | 79 | .4903 | 10.71 |
| 67 | .3273 | 7.308 | 80 | .5067 | 11.04 |
| 68 | .3388 | 7.571 | 81 | .5236 | 11.39 |
| 69 | .3506 | 7.798 | 82 | .5409 | 11.75 |
| 70 | .3628 | 8.055 | 83 | .5588 | 12.11 |
| 71 | .3754 | 8.319 | 84 | .5772 | 12.49 |
| 72 | .3883 | 8.588 | 85 | .5960 | 12.87 |
| 73 | .4016 | 8.867 | 86 | .6153 | 13.27 |
| 74 | .4153 | 9.153 | 87 | .6352 | 13.67 |
| 75 | .4295 | 9.448 | 88 | .6555 | 14.08 |
| 76 | .4440 | 9.749 | 89 | .6765 | 14.51 |
| 77 | .4590 | 10.06 | | | |

* 7,000 grains equals 1 pound.

When a given mixture of air and water vapor is cooled without loss of moisture, a temperature is eventually reached where the air becomes saturated with water vapor and condensation can occur. The temperature then existing is called the dew point. At any given dew point, water vapor is always exerting a pressure corresponding thereto.

The air in the hollow spaces or pores in building walls always contains water vapor. Under certain conditions the temperature of portions of the wall may be below the dew point of the air in contact with them, and condensation will occur.

While at first it might appear that any water not in vapor form in the wall would be ordinary liquid water, the facts are not quite so simple. Many building materials are able to absorb water to a moderate extent without undergoing great changes. Wood will absorb water up to from 20 to 30 percent by weight at relative humidities near 100 percent. Beyond some such point further water absorbed is retained as free liquid water. Other similar materials differ in the moisture content at which further absorbed water is only mechanically held.

Water has several effects on building materials. As is very well known, some materials, such as wood, expand with increasing moisture content. If conditions of greatly varying humidity occur in different parts of the cross section of a single framing member there will be some tendency for the wood to warp. High humidity favors decay of wood. Some other materials are adversely affected by continued

exposure to liquid water. Water promotes corrosion of metals, and even some mineral insulating materials show permanent change in the course of time when in contact with water. The insulating value of materials in general is greatly decreased by the presence of free water. Droplets of water tend to bridge gaps between separate solid portions of ordinary insulating materials and increase the transfer of heat. The distillation of moisture from place to place in the wall can also increase heat transfer since heat must be added to evaporate the moisture and then is released again in the colder region where the moisture may happen to condense. Normally this effect will be important mainly when the temperature indoors is increasing.

Moisture condensed in the walls may not remain in its first location. It is even possible for it to migrate and succeed in making the plaster and wallpaper damp and discolored. When that symptom appears in late winter or spring, and unless the trouble is caused by leaks, it is very probable that condensation in the wall is responsible. In such a case the following explanation should be to the point.

If different gases mix without stirring, the movement of the one gas into the other follows a simple law of diffusion. If one gas is of relatively low concentration, its rate of diffusion into the other is closely proportional to its pressure difference per unit distance. The law is found to hold fairly well for the diffusion of moisture, even through many solid materials. There are exceptions, but in this discussion they will be largely ignored. Data in regard to diffusion of water vapor through various materials will be found in table 2. In this has been used as a unit

TABLE 2.—Permeability of various materials to water vapor

| Material | Thick-ness | Permeability to moisture (P) | Vapor resistance (1/P) |
|---------------------------------------|------------|--------------------------------|--------------------------------|
| BABBITT [8] a | | | |
| | Inches | Grains sq ft hr (lb/sq in.) | Grains sq ft hr (lb/sq in.) |
| Fiberboard | 0.492 | 60.6 | 0.0168 |
| Fiberboard, 1 surface asphalt, rolled | .492 | 8.0 | .125 |
| Fiberboard, 1 surface asphalt, dipped | .63 | 17.3 | .0578 |

TABLE 2.—Permeability of various materials to water vapor—Continued

| Material | Thick-ness | Permeability to moisture (P) | Vapor resistance (1/P) |
|--|------------|--------------------------------|--------------------------------|
| BABBITT [8]—Continued | | | |
| | Inches | Grains sq ft hr (lb/sq in.) | Grains sq ft hr (lb/sq in.) |
| Fiberboard, laminated, 2 samples cemented together with asphalt | .985 | 2.74 | .365 |
| Fiberboard, laminated, 6 layers with 5 layers of asphalt | .527 | 0.23 | 4.35 |
| Fiberboard | 1.06 | 37.0 | 0.0270 |
| Fiberboard, same reduced in thickness | 0.803 | 43.4 | .0230 |
| Do | .599 | 56.4 | .0177 |
| Do | .405 | 74.5 | .0134 |
| Do | .201 | 133.3 | .0075 |
| Wood, spruce | .563 | 3.48 | .287 |
| Do | .480 | 4.03 | .248 |
| Do | .405 | 3.94 | .254 |
| Do | .323 | 4.93 | .203 |
| Do | .232 | 7.24 | .138 |
| Do | .161 | 10.35 | .097 |
| Wood, pine | .80 | 1.88 | .532 |
| Do | .645 | 2.52 | .397 |
| Do | .496 | 3.45 | .290 |
| Do | .315 | 5.55 | .180 |
| Do | .169 | 9.65 | .104 |
| Wood (pine) A | .508 | 6.47 | .155 |
| Wood (pine) A, 1 coat of Al paint | | 3.42 | .292 |
| Wood (pine) A, 2 coats of Al paint | | 0.92 | 1.09 |
| Wood (pine) A, 3 coats of Al paint | | .71 | 1.41 |
| Wood (pine) B | .508 | 6.68 | 0.150 |
| Wood (pine) B, 1 coat of Al paint | | 3.85 | .260 |
| Wood (pine) B, 2 coats of Al paint | | 1.95 | .512 |
| Wood (pine) B, 3 coats of Al paint | | 1.53 | .654 |
| Kraft paper, 1 sheet | .00394 | 168. | .00595 |
| Kraft paper, 2 sheets | | 107. | .00635 |
| Kraft paper, 3 sheets | | 80. | .0125 |
| Kraft paper, 4 sheets | | 63.6 | .0157 |
| Kraft paper, 5 sheets | | 53.5 | .0183 |
| Kraft paper, 5 sheets | | 65.3 | .0162 |
| Kraft paper, 7 sheets | | 45.5 | .0220 |
| Kraft paper, 7 sheets | | 38.3 | .0261 |
| Kraft paper, 8 sheets | | 38.3 | .0261 |
| Kraft paper, 8 sheets | | 33.1 | .0302 |
| Black vulcanized rubber, hardness 40 | .0791 | 0.185 | 5.4 |
| Plasticized rubber hydrochloride | .00158 | .382 | 2.62 |
| 30-30-30 paper A | .0071 | 1.83 | 0.546 |
| 30-30-30 paper B | .0071 | 1.79 | .558 |
| Duplex Seutan 6-6, asphalt between 2 sheets of kraft | .0071 | 0.946 | 1.06 |
| Seutan 0-14 (kraft infused with asphalt on 1 surface) | | | |
| A | .0071 | 8.6 | 0.116 |
| Seutan 0-14 B | .0071 | 15.97 | .0626 |
| Seutan 14 (kraft infused with asphalt on surfaces) A | .0071 | 13.9 | .0719 |
| Seutan 14 B | .0071 | 15.8 | .0633 |
| Black building paper, black shiny paper infused with asphalt | .0173 | 0.376 | 2.66 |
| Asphalt felt, 15-lb. felt building paper with soft dull appearance | .0319 | 13.5 | 0.0741 |
| Pressed corkboard A | .905 | 4.75 | .211 |
| Pressed corkboard B | .985 | 5.42 | .184 |
| Plaster | 1.34 | 27.1 | .0369 |
| Plasterboard, plaster between sheets of heavy paper | 0.37 | 70.2 | .0142 |
| Masonite Presdwood, tempered | .13 | 9.76 | .102 |
| Masonite Presdwood | .13 | 21.7 | .0461 |
| Masonite Presdwood, 5 thicknesses | | 6.25 | .16 |
| Masonite Presdwood, 7 thicknesses | | 4.9 | .204 |

TABLE 2.—Permeability of various materials to water vapor—Continued

| Material | Thick-ness | Permeability to moisture (P) | Vapor resistance (1/P) |
|---|------------|--------------------------------|--------------------------------|
| TEESDALE [11] | | | |
| | Inches | Grains sq ft hr (lb/sq in.) | Grains sq ft hr (lb/sq in.) |
| Foil-surfaced reflective insulation, double-faced | | 0.172 to 0.263 | 5.82 to 3.8 |
| Roll roofing—smooth, 40 to 65 lb/roll 108 sq ft | | .263 to .348 | 3.8 to 2.87 |
| Asphalt impregnated and surface-coated sheathing paper, glossy, 50 lb and 35 lb/500 sq ft | | .433 to 1.57 .348 to 4.19 | 2.31 to 0.637 2.87 to .239 |
| Duplex or laminated papers, 30-30 | | 2.80 to 5.24 | 0.357 to .191 |
| Duplex or laminated papers, 30-60-30 | | 1.05 to 1.75 | .952 to .572 |
| Duplex papers, reinforced | | 1.396 to 4.19 | .716 to .239 |
| Duplex paper, coated with metal oxides | | 1.05 to 2.63 | .952 to .381 |
| Insulation backup paper, treated | | 1.75 to 6.97 | .572 to .144 |
| Gypsum lath with Al-foil backing | | 0.173 to 0.785 | 5.78 to 1.27 |
| Plaster, wood lath | | 22.4 | 0.0446 |
| Plaster, 3 coats of lead and oil | | 7.5 to 7.84 | 0.133 to .127 |
| Plaster, 3 coats of flat wall paint | | 8.72 | .115 |
| Plaster, 2 coats of Al paint | | 2.35 | .425 |
| Plaster, fiberboard or gypsum lath | | 40.2 to 41.9 | .0249 to .0239 |
| Slater's felt | | 10.5 to 52.4 | .0952 to .0191 |
| Plywood, ¼-in., Douglas fir, soy bean glue, plain | | 8.72 to 13.1 | .115 to .0764 |
| Plywood, 2 coats of asphalt paint | | 0.87 | 1.15 |
| Plywood, 2 coats of Al paint | | 2.63 | 0.38 |
| Plywood, ½ in., 5-ply Douglas fir | | 5.43 to 5.59 | .184 to .179 |
| Plywood, ¼ in., 3-ply Douglas fir, artificial resin glue | | 8.72 to 13.1 | .115 to .0761 |
| Plywood, ½ in., 5-ply Douglas fir, artificial resin glue | | 5.59 to 6.85 | .179 to .146 |
| Insulating lath and sheathing, board type | | 52.3 to 69.8 | .0191 to .0143 |
| Insulating sheathing, surface-coated | | 6.17 to 8.88 | |
| Compressed fiber board, ¾ in. | | 10.3 | .097 |
| Insulating cork blocks, 1 in. | | 12.6 | .0794 |
| Blanket insulation between coated papers, ½ and 1 in. | | 3.90 to 4.07 | .256 to .246 |
| Mineral wool, unprotected, 4 in. | | 59.2 | .0169 |

FOREST PRODUCTS LABORATORY

| | | |
|--|-------|---------|
| Kraft paper | 112. | 0.00893 |
| Plastered wall, no paint, plasterboard lath | 41.7 | .024 |
| Plastered wall, no paint, wood lath | 22.2 | .045 |
| Slater's felt, best type | 10.1 | .099 |
| Duplex paper | 2.78 | .36 |
| Plastered wall, 2 coats of Al paint, wood lath | 2.43 | .411 |
| Asphalt-coated paper, 35lb/500 sq ft roll | 2.08 | .481 |
| Asphalt-coated paper, 50lb/500 sq ft roll | 1.04 | .962 |
| Metal-coated paper | 0.174 | 5.75 |

INTERNATIONAL CRITICAL TABLES

| | | |
|-------------------|------|--------|
| Still air, 3½ in. | 70.9 | 0.0141 |
| Still air, 1 in. | 257 | .00389 |

WRAY [3]

| | | |
|--|------|------|
| 1 coat of Al paint on wood, Bakelite resin varnish | 1.22 | 0.82 |
| 1 coat of Al paint on wood, glycerol phthalate varnish | 1.22 | .82 |
| 2 coats of ordinary paint, linseed oil | 3.48 | .287 |
| 1 coat of Al paint on wood, ester gum varnish | 2.26 | .445 |

TABLE 2.—Permeability of various materials to water vapor—Continued

| Material | Thick-ness | Permeability to moisture (P) | Vapor resistance (1/P) |
|---------------------------|------------|--------------------------------|--------------------------------|
| HERRMANN [4] | | | |
| | Inches | Grains sq ft hr (lb/sq in.) | Grains sq ft hr (lb/sq in.) |
| Hydrocarbon wax | b 1 | 0.00052 | 1.9 × 10 ⁴ |
| Thiokol | b 1 | .00014 | 7.1 × 10 ³ |
| Gutta percha | b 1 | .00035 | 2.86 × 10 ³ |
| Hard rubber | b 1 | .00035 | 2.86 × 10 ³ |
| Para gutta | b 1 | .00042 | 2.38 × 10 ³ |
| Polystyrene | b 1 | .00087 | 1.15 × 10 ³ |
| Asphalt sealing compound | b 1 | .00087 | 1.15 × 10 ³ |
| Phenol fiber | b 1 | .00148 | 676 |
| Soft vulcanized rubber | b 1 | .00157 | 637 |
| Benzyl cellulose | b 1 | .00226 | 442 |
| Bakelite | b 1 | .0035 | 286 |
| Waterproof cellulose film | b 1 | .062 | 16.1 |
| Cellulose acetate | b 1 | .12 | 8.3 |

MILLER [7]

| | | |
|---|------|-------|
| Plaster base and plaster, ¾ in. | 30 | 0.083 |
| Vapor barrier (Kimberly Clark Corp. data) | 1.65 | .61 |
| Fir sheathing, ¾ in. | 6 | .167 |
| Waterproof paper | 100 | .01 |
| Pine lap siding | 10 | .1 |
| Paint film | 7 | .14 |
| Celotex, ¾ in. | 25.5 | .0392 |
| Brick masonry, 4 in. | 2.2 | .454 |

MARTLEY [2]

| | | |
|---------------------------|------|--------|
| Wood, Scot pine, per inch | 21.4 | 0.0467 |
|---------------------------|------|--------|

WRAY

| | | |
|----------------------------------|-----|-------|
| Wood, western yellow pine, ¼ in. | 1.8 | 0.556 |
|----------------------------------|-----|-------|

a Figures in brackets indicate the literature references at the end of this paper.

b Data recalculated on basis of 1-inch thickness.

of permeability to moisture the number of grains per hour passing through 1 sq ft of the actual thickness specified when the vapor pressures at the two surfaces differ by 1 lb/sq in. The reciprocal of this permeability has also been listed and has been called the vapor resistance. The number of grains of moisture passing through 1 sq ft in 1 hour with 1-lb/sq in. pressure difference = permeability = 1/vapor resistance.

If winter air is brought into a house from the outdoors and is heated without addition of moisture, the resulting warm air will contain the same proportion of moisture as before, and therefore the pressure of the contained water vapor will be the same, but the relative humidity will be lower than that of the air outside. This is true because the warm air¹ can contain more moisture than it could when cold. If the diffu-

¹ Strictly, the space contains the moisture.

sion of the water vapor through the walls is proportional to the vapor-pressure difference between inside and outside, there will be no net passage of moisture, since this difference is zero. In such a case there would be no tendency for air in any part of the wall to have a relative humidity greater than the value outdoors. In fact all parts would be subject to lower relative humidities, since the air would be warmer than the air out of doors.

Actually, in an occupied house moisture is always being added to the air, so that the vapor pressure is higher inside the house than outside. The water vapor penetrates the plaster or other interior finish and passes on through the rest of the wall to the outside. Accordingly, the vapor pressure within the walls will be higher than that outside, although less than that within the interior of the house. The manner in which

the vapor pressure falls off from the high value inside the house to the low value outside the house, together with the temperature distribution across the wall, determines the relative humidity at all points within the wall.

In an ordinary frame wall condensation is more likely to occur on the inner surface of the sheathing than elsewhere, except when sheathing papers highly resistant to water vapor are employed, in which case condensation may first appear on the sheathing paper. In other types of hollow walls condensation tends to occur in corresponding regions.

Differences in vapor pressure through different parts of the wall from inside to outside distribute themselves in proportion to the vapor resistance of the respective parts. That is, the fraction of the total vapor-pressure drop from inside to outside occurring between the air in-

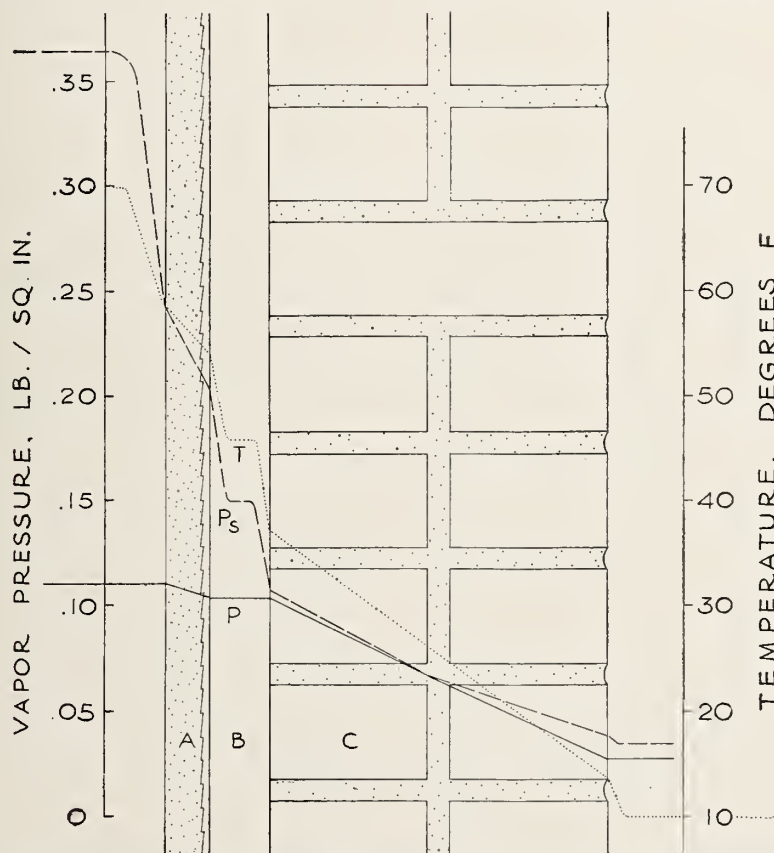


FIGURE 1.—Nature of the temperature, corresponding saturation vapor pressure, and actual vapor pressure distributions in an uninsulated brick wall.

Wall composed of A, plaster on metal lath; B, air space between furring strips; and C, brick, exposed to 70° F and 30-percent relative humidity indoors and 10° F and 80-percent relative humidity outdoors.

doors and some chosen point within the wall is the same as that fraction of the total vapor resistance of the wall occurring between the air indoors and the chosen point.

In this it is analogous to heat flow, in which differences in temperature through different parts of the wall from inside to outside are proportional to the thermal resistance of these parts. In other words, the fraction of the total temperature drop from inside to outside included between the indoor air and the chosen point is the same as that fraction of the total resistance to heat flow included between the indoor air and the same chosen point.

From these facts one can calculate the vapor pressure and temperature at any point in the wall and estimate whether the calculated vapor pressure is safely below saturation vapor pressure for the calculated temperature. As an explanation of this the following examples are given.

1. A brick wall composed of metal lath and plaster, air space between furring strips, common and face brick is exposed to 70° F and 30-percent relative humidity indoors and 10° F and 80-percent relative humidity outdoors. A section of this wall is pictured in figure 1 with curves showing the nature of vapor-pressure and temperature distributions within the wall. To determine whether condensation will occur on the inner surface of the brick, data on vapor resistance and thermal resistance of the various parts of the wall are examined.²

The following vapor resistances are taken, starting with the indoor side of the wall:

Air to surface of plaster..... not over 0.001
Metal lath and plaster (data for wood lath and plaster)..... .045
Air space..... not over .014
Brick (doubling the figure for 4-in. masonry).... .9
Surface of face brick to outside air..... Negligible.

The sum of the first three is 0.060, and the total for the entire wall is 0.960. The vapor-resistance fraction is therefore equal to 0.060/.960, or about 0.0625. This means that about one-sixteenth of the vapor resistance of the wall is comprised between the air of the room and the inner surface of the brick.

² Units of vapor resistance and thermal resistance have been omitted in much of the discussion following. The units are hr sq ft (lb/sq in.)/grain, and hr sq ft deg F/btu.

One may similarly examine the data on thermal resistance, or insulating value, for the separate parts of the wall, as given in table 3. The following are taken as thermal resistances:

TABLE 3. ---Thermal resistance of various materials

| Materials | Thermal resistance |
|--|--------------------|
| | hr sq ft deg F |
| Yellow pine or fir, 2½ in. thick..... | .98 |
| Yellow pine lap siding..... | .78 |
| Wood lath and plaster..... | .40 |
| Metal lath and plaster..... | .23 |
| Mineral wool, per in..... | 3.70 |
| Stucco..... | 0.08 |
| Brick, common 4-in..... | .80 |
| Brick, face 4-in..... | .44 |
| Fiberboard, per in..... | 3.0 |
| Plasterboard ½-in..... | 0.35 |
| Surface film, still air..... | .61 |
| Surface film, 15 mph..... | .17 |
| Surface film, rough stucco, 15 mph..... | .11 |
| Air space more than ¾ in. across not lined with reflector..... | .91 |

Air to surface of plaster..... 0.61
Metal lath and plaster..... .23
1½-in. air space..... .91
Common brick..... .80
Face brick..... .44
Surface of face brick to outside air..... .17

The sum of the first three thermal resistances is 1.75, and the total thermal resistance of the wall is 3.16. The thermal-resistance fraction is therefore equal to 1.75/3.16, or 0.554. This means that about 55 percent of the thermal resistance of the wall is comprised between the air of the room and the inner surface of the brick.

These fractions will now be applied. For the water vapor there is indoors a vapor pressure of 30 percent of 0.3628 lb/sq in., or 0.109 lb/sq in. Outdoors there is a vapor pressure of 80 percent of 0.03092 lb/sq in., or 0.02474 lb/sq in. The drop in vapor pressure through the wall is 0.109 lb/sq in. minus 0.025 lb/sq in., or 0.084 lb/sq in. Multiplying this drop by the vapor-resistance fraction 0.0625, one obtains 0.00525 lb/sq in. to be subtracted from the 0.109 lb/sq in. indoors. The result, 0.104 lb/sq in., is the vapor pressure adjacent to the inner surface of the brick—corresponding to a “dew-point” temperature of 36° F.

The same procedure may be continued in regard to temperature. The temperature in-

doors is 70° F. The temperature outdoors is 10° F. The drop in temperature through the wall is then 60°. Multiplying this drop by the thermal-resistance fraction, 0.554, one gets 33.24° as the drop in temperature between the air of the room and the inner surface of the brick. Subtracting the 33.24° from 70°, the indoor temperature, one obtains 36.76° as the temperature of the inner surface of the brick—which is higher than the above-noted “dew-point” temperature.

This temperature and the vapor pressure for the same point are compared with the figures given in table 1 for saturation pressures. One finds for the temperature calculated a saturation pressure of 0.107 lb/sq in. Since the actual vapor pressure as calculated (0.104 lb/sq in.) is less than this, it is not indicated that condensation will occur on the inner surface of the brick in this particular wall for the particular conditions of temperature and relative humidity quoted.

2. As a second example the same wall is considered, except that for the air space will be substituted a fill of insulating material adding negligible vapor resistance. The following values of vapor resistances and thermal resistances are based on tables 2 and 3:

| | <i>Vapor resistance</i> | <i>Thermal resistance</i> |
|---------------------------------------|-----------------------------|-------------------------------|
| Air to surface of plaster..... | 0.001 | 0.61 |
| Lath and plaster..... | .045 | .23 |
| Insulation (1½-in. mineral wool)..... | .014 | 6.01 |
| Brick..... | .9 | 1.24 |
| Surface to air..... | 0 | 0.17 |

The vapor-resistance fraction is as before, 0.0625, and the thermal-resistance fraction is 6.85/8.26, or 0.83. The use of these, with the total vapor pressure and temperature drops calculated before, gives for the inner surface of the brick a temperature of 20.2° F, and, as before, a vapor pressure of water of 0.104 lb/sq. in. and a corresponding “dew-point” temperature of 36° F. Table 1 indicates that for the temperature 20.2° F a vapor pressure of only 0.05098 lb/sq in. can occur without condensation. It is thus seen that under these conditions of temperature and humidity water will be condensing against the inner surface of the brick—the temperature being below the above-noted “dew-point” value.

Similar calculations may easily be made for any wall, if data are available for its constituent parts. As table 2 shows, data are not abundant on all construction materials. For types of wall construction which have been considered, the results are somewhat similar to those just obtained for the brick wall. In practically all hollow walls, the possibility of condensation on the cold side of the hollow space is the critical point, since condensation is generally more likely to occur there than in neighboring regions. A summary of calculations for different walls for several indoor humidities and outdoor temperatures is given in table 4.

In interpreting the results given here, it is necessary to recall the warning that since the data were obviously very uncertain the results are also very uncertain.

If the figures are to be used in building design, an ample factor of safety should be included, although the figures seem likely to be in error in such a direction that a factor of safety is already present. An important reason for this is that in all this discussion the air leakage into the wall from the outside has been disregarded. Its effect is to reduce the tendency for condensation, but by an amount which naturally cannot be estimated without definite data as to the amount of air leakage occurring.

Most of table 4 should be clear from the discussion already given. To clarify the method for calculating the last three columns, the following example gives a calculation of the vapor resistance which must be added to the warm side of the wall to just barely prevent condensation. The case considered is that of the brick wall with 1½ in. of insulation and exposed to 30° F and 80-percent relative humidity outside and 70° F and 40-percent relative humidity indoors. It is assumed that the vapor resistance of lath and plaster and insulation in the wall is 0.06 hr sq ft (lb/sq in.)/grain and the vapor resistance of the remaining outer part of the wall is 0.9 hr sq ft (lb/sq in.)/grain. The temperature at the inner surface of the brick, according to the previous explanation is found to be 70° F—0.83 (70° F—30° F)=70° F—0.83 (40° F)=70° F—33.2° F=36.8° F.

TABLE 4.—Illustrative calculations concerning vapor barriers

| Wall type | Thermal resistance ^a | | Thermal-resistance fraction (to chosen point: Cold side of insulation, or hollow space, if present) | Vapor resistance ^b | | Vapor-resistance fraction (to chosen point) | Necessary increase in inner vapor resistance ^b to prevent condensation at the chosen point | | |
|--|---------------------------------|-------|---|-------------------------------|-------|---|---|---------------------------------------|--|
| | Inner part | Total | | Inner part | Total | | 30° F. 80% outside; 70° F. 40% inside | 10° F. 80% outside; 70° F. 30% inside | —10° F. 80% outside; 70° F. 20% inside |
| Frame wall: | | | | | | | | | |
| Uninsulated..... | 1.92 | 3.85 | .50 | .06 | .460 | .13 | 0 | 0 | 0 |
| 3½ in. of insulation..... | 14.41 | 16.34 | .88 | .06 | .460 | .13 | .47 | 1.28 | 2.24 |
| 1 in. of insulation in middle of space..... | 6.53 | 8.46 | .77 | .06 | .460 | .13 | .14 | 0.48 | 0.83 |
| 2 in. of insulation in middle of space..... | 10.23 | 12.16 | .84 | .06 | .460 | .13 | .32 | .90 | 1.54 |
| Frame and stucco: | | | | | | | | | |
| Uninsulated..... | 1.92 | 3.09 | .62 | .06 | .305 | .197 | 0 | 0 | 0.06 |
| 3½ in. of insulation..... | 14.41 | 15.58 | .93 | .06 | .305 | .197 | .43 | 1.24 | 2.30 |
| 1 in. of insulation..... | 6.53 | 7.70 | .85 | .06 | .305 | .197 | .19 | 0.58 | 1.01 |
| 2 in. of insulation..... | 10.23 | 11.40 | .90 | .06 | .305 | .197 | .32 | .92 | 1.65 |
| Brick veneer: | | | | | | | | | |
| Uninsulated..... | 1.92 | 3.87 | .50 | .06 | .71 | .0845 | 0 | 0 | 0 |
| 3½ in. of insulation..... | 14.41 | 16.36 | .88 | .06 | .71 | .0845 | .80 | 2.11 | 3.67 |
| 1 in. of insulation..... | 6.53 | 8.48 | .77 | .06 | .71 | .0845 | .27 | 0.82 | 1.38 |
| 2 in. of insulation..... | 10.23 | 12.18 | .84 | .06 | .71 | .0845 | .56 | 1.49 | 2.54 |
| Brick, solid 8 in., furred, metal lath, and plaster: | | | | | | | | | |
| Uninsulated..... | 1.75 | 3.16 | .554 | .06 | .96 | .0625 | 0 | 0 | 0.05 |
| 1½ in. of insulation..... | 6.85 | 8.26 | .83 | .06 | .96 | .0625 | .73 | 1.92 | 3.24 |

^a hr sq ft deg F/Btu.^b hr sq ft (lb/in.²)/grain.

The vapor pressure at this inner brick surface must not be higher than the saturation vapor pressure for 36.8° F, as given by table 1, namely 0.1075 lb/sq in. The vapor pressure on the outside of the wall is found to be 0.80 times 0.0808 lb/sq in., or 0.06464 lb/sq in. The vapor pressure indoors is 0.40 times 0.3628, or 0.1451 lb/sq in. The drop in vapor pressure across the outer part of the wall is 0.1075 lb/sq in. minus 0.0646 lb/sq in., or 0.0429 lb/sq in.

The drop in vapor pressure across the inner side of the wall is 0.1451 lb/sq in. minus 0.1075 lb/sq in, or 0.0376 lb/sq in. Since the vapor resistance of the various parts are proportional to the corresponding vapor pressure drops, the vapor resistance on the inner side needs to be 0.0376/0.0429 times as great as the vapor resistance of the outer side. This gives 0.0376/-0.0429 times 0.9 hr sq ft (lb/sq in.)/grain=0.79 hr sq ft (lb/sq in.)/grain as the inner vapor resistance desired. Since this wall was supposed to have an inner vapor resistance of 0.060 hr sq ft (lb/sq in.)/grain originally, it is

necessary to add a barrier having as vapor resistance the difference of these, or 0.73 hr sq ft (lb/sq in.)/grain. One might now search table 2 for possible barriers having vapor resistances of this magnitude or greater and having negligible thermal resistance.

The graphs in figures 2, 3, and 4 may be convenient for rapid judgment as to the adequacy of a given moisture barrier for a given wall. The outdoor relative humidity is here assumed to be 80 percent and the indoor temperature 70° F for each case. These are considered more or less typical of winter conditions occurring in many parts of the country with snow throughout the winter. If thermal-resistance fractions and vapor-resistance fractions are laid out along their corresponding axes, the point thus located by intersection of the horizontal and vertical lines indicates the indoor relative humidity at which trouble might occur under the conditions quoted for the separate charts, namely for outdoor temperatures of 30°, 10°, and —10° F, respectively.

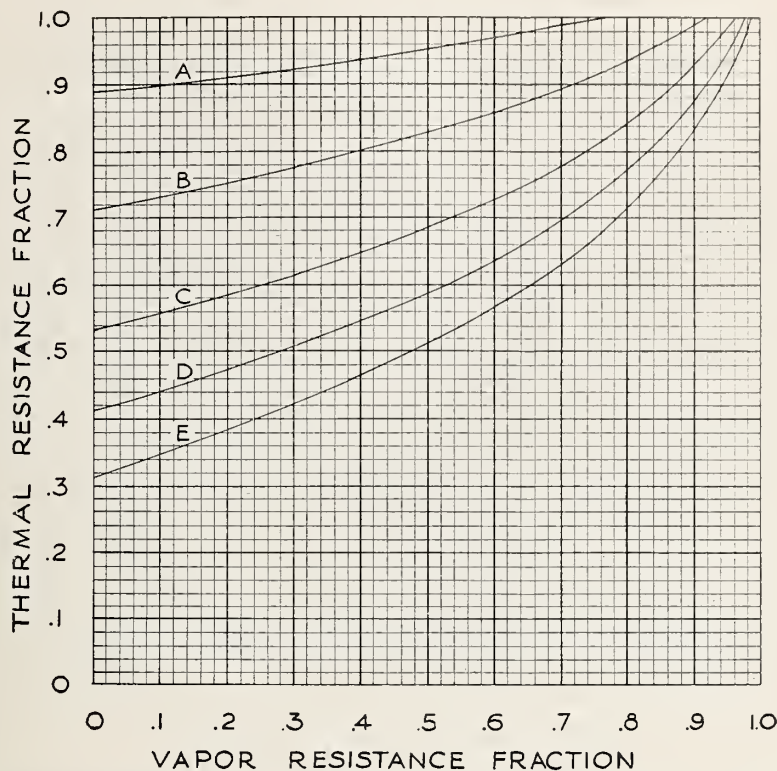


FIGURE 2.—Indoor relative humidity able to cause condensation at a given point in a wall, as determined by the thermal-resistance fraction and the vapor-resistance fraction.

(Fraction of thermal resistance on warm side of the point and fraction of vapor resistance on warm side of the point in question.)

Curves A, 30%; B, 40%; C, 50%; D, 60%; and E, 70% indoor relative humidity.

Conditions: 30° F outdoors; 70° F indoors; and 80-percent relative humidity outdoors.

For example, any combination of thermal-resistance fraction and vapor-resistance fraction represented by a point on or below the 40-percent line represents a type of wall in which condensation will not occur unless the indoor humidity exceeds 40 percent. The region below the 40-percent line therefore represents combinations of thermal and vapor resistances in which relative humidities up to 40 percent are safe. The region above the line represents combinations in which humidities as high as 40 percent should be avoided.

Thus one may consider the case of a wall the thermal-resistance fraction of which is 0.50 and the vapor-resistance fraction 0.13. Figure 2 shows that a relative humidity of about 54 percent or more indoors could lead to condensation when the outdoor temperature is 30° F. Figure 3 indicates about 38 percent for a temperature of 10° F, and figure 4 indicates about 26 percent for an outdoor temperature of -10° F. These results would doubtless be consider-

ably altered if the ventilation of the wall by air leakage could be allowed for.

Figures 2, 3, and 4 can be used for determining the moisture-condensation conditions at a selected spot in insulated walls of many types, through which heat is transferred by conduction or its equivalent, provided the heat-transfer resistance and the vapor-transfer resistance fractions are known. It cannot be directly utilized in connection with walls having appreciable ventilating spaces.

When studying any thermal-conduction type of wall, full consideration must be given to the actual space distribution within the wall of both the thermal and the vapor-transfer resistances. Critical points are to be looked for where there is space concentration of vapor-transfer resistance on the cold side of any space concentration of thermal resistance.

Without regard in any respect to the actual space distribution of the thermal and vapor-transfer resistances, if the space distribution of

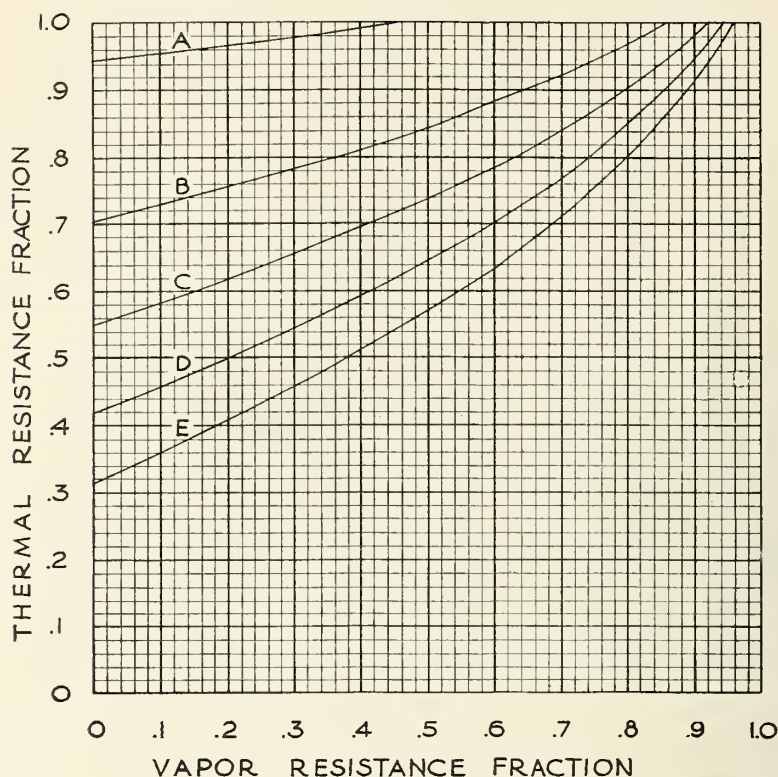


FIGURE 3.—Indoor relative humidity able to cause condensation at a given point in a wall, as determined by the thermal-resistance fraction and the vapor-resistance fraction.

(Fraction of thermal resistance on warm side of the point and fraction of vapor resistance on warm side of the point in question.)

Curves A, 10%; B, 20%; C, 30%; D, 40%; and E, 50% indoor relative humidity.

Conditions: 10° F outdoors; 70° F indoors; and 80-percent relative humidity outdoors.

the thermal resistance is the same as (or approximately the same as) the space distribution of the vapor-transfer resistance, the wall acts exactly (or approximately) as though it were composed of homogeneous insulating material. In certain cases the walls may well be treated as though made up of separate layers of homogeneous insulating materials. When this condition is reached (or approximated) one cannot determine by mere superficial examination just where and when condensation may take place—the below-dew-point temperatures may be reached within the mass of the material, although not at either edge.

Consider, for example, the case where the wall may properly be regarded as a single uniform thick sheet having at its warm surface air of one temperature and relative humidity and at the cold surface air of another temperature and relative humidity. There is in all parts of the wall the same rate of passage of moisture if no condensation is occurring and a steady state

has been established. The vapor-pressure drop is then uniformly distributed across the material in the same manner as is the temperature drop. This may be illustrated by figure 5 in which the temperature is indicated at uniform intervals along a horizontal axis. This may be considered the direction across the layer of material having uniform spacing of insulation of uniform thermal resistance or at least uniform sections of the total thermal resistance of the material. The two surfaces of the material are then located on this scale by their corresponding temperatures. Plotted vertically are the saturation pressures for water vapor corresponding to all temperatures along the horizontal axis. If the actual vapor pressures at the two surfaces are now plotted for their positions as indicated on the temperature scale, for example A and B, the vapor pressure at any point between will be indicated by the distance vertically upward to the straight line between them. As examples, three cases have

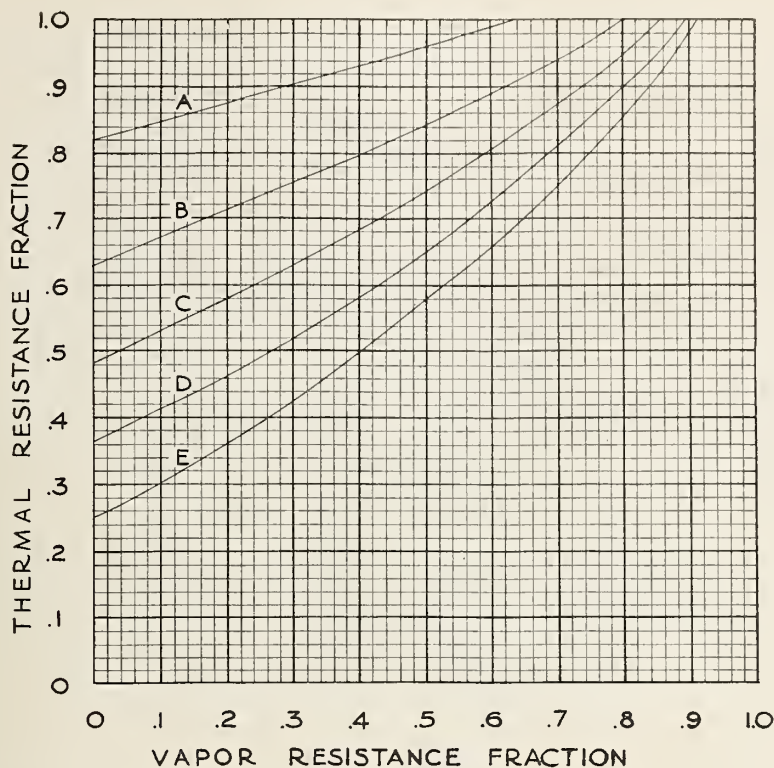


FIGURE 4.—Indoor relative humidity able to cause condensation at a given point in a wall, as determined by the thermal-resistance fraction and the vapor-resistance fraction.

(Fraction of thermal resistance on warm side of the point and fraction of vapor resistance on warm side of the point in question.)

Curves A, 50%; B, 10%; C, 20%; D, 30%; and E, 40% indoor relative humidity.

Conditions: -10° F outdoors; 70° F indoors; and 80-percent relative humidity outdoors.

been shown, originating from having different vapor pressures at the point *A* corresponding to 25-, 50-, and 80-percent relative humidities.

In each case the vapor pressure at the point *C* with temperature 40° F is indicated on the vapor-pressure scale by the line upward from *C* to the appropriate slanting line. Thus the slanting line through *D* illustrates a case with 50-percent relative humidity at *A* in which the vapor pressure at *C* is below the saturation value, although the apparent tangency with the saturation pressure curve near 20° F indicates that condensation is in danger of occurring in a very limited region of the part at 20° F. The slanting line through *D'* lies above the saturation curve for much of the wall and in particular for the point *C*, indicating that for a relative humidity of 80 percent at *A* condensation is to be expected throughout a considerable portion of the wall. The third slanting line, passing through *D''*, lies entirely below the saturation-pressure curve and indicates that condensation

will occur at no point in the slab when the relative humidity at *A* is 25 percent. These calculations, which are approximately correct, may be useful in indicating possibilities of condensation within the material of a wall with similar spatial distribution of the heat and vapor-transfer resistances, where seemingly there is no specific critical condensation point.

III. MEANS OF PREVENTING CONDENSATION

The methods by which condensation of moisture in insulated walls may be avoided are becoming fairly well known. A little consideration of the principles already explained here shows that possible remedies will include:

1. Lowering the indoor relative humidity, either by lowering the rate at which water vapor is added to the air in the house or by increasing the ventilation of the house interior to the outdoors.

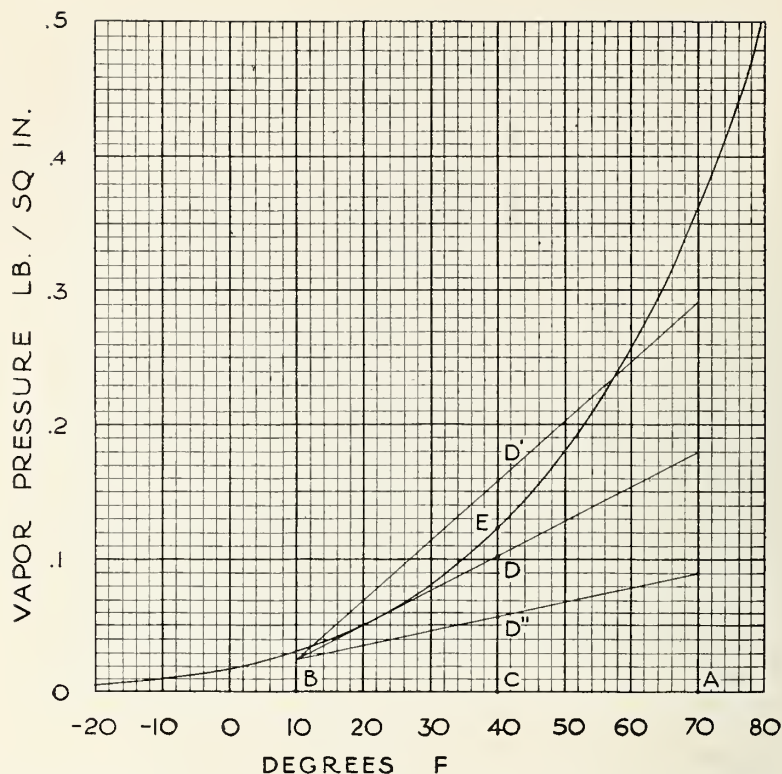


FIGURE 5.—Method of predicting vapor pressure conditions in a wall composed of a single slab of permeable material. 80-percent outside humidity (at B); D' , line for 80-percent humidity inside (at A); D , line for 50-percent humidity inside (at A); D'' , line for 25-percent humidity inside (at A); straight lines, actual vapor pressures; and curve, saturation vapor pressures.

2. Increasing the vapor resistance on the warm side of the insulation.

3. Lowering the vapor resistance on the cold side of the insulation by venting to the outside air or by using less vapor-resistant outer wall materials without diminishing protection against driving rains.

These will be considered in order.

1. The indoor relative humidity is likely to be kept at sufficiently moderate values to avoid condensation on windows most of the time. When use is made of single-glazed windows, the mean relative humidity is then likely to be so low that trouble from condensation within walls will not occur. However, when use is made of double-glazed windows, or storm windows, there may be condensation within the wall without condensation on the glass, either inside or outside.

2. The addition of a vapor barrier on the warm side of the wall insulation is an effective procedure. High humidities frequently occur temporarily, even in houses which would

scarcely be described as humidified. If the inside relative humidity is kept high the vapor barrier is of value because it furnishes the only remaining way of effectively reducing the rate at which moisture enters the wall. Naturally, if a vapor barrier prevents part of the loss of moisture through the walls, it will also reduce the rate at which moisture must be supplied to maintain any chosen relative humidity. Any water evaporated is, of course, removed largely by normal ventilation.

3. The provision for adequate ventilation from the interior of the wall to the outdoors or the use of sheathing paper with smaller vapor resistance can be helpful. Unless the ventilation to outdoors is abundant, there is a tendency for the beneficial effect of ventilation of the wall to be limited to the vicinity of the openings to the outside. The air space between the insulation and sheathing should be so proportioned as to permit air circulation and thus allow water vapor to seek natural outlets. It is, of course, obvious that the wall must be left capable of

shedding the rains, or even more water may enter from the outside than would have accumulated by condensation from the inside.

The calculation of the resistance necessary in a vapor barrier in order to prevent condensation in a particular wall has already been discussed, and some results are given in table 4. It will be noted that for conditions which do not seem unusually severe the resistance which must be added is such that the vapor resistance on the warm side of the insulation becomes several times as great as that on the cold side. The metal foils and some of the asphalt papers are effective vapor barriers.

Some of the flexible blanket and rigid board types of insulating materials are now provided with self-contained vapor barriers. When used on the warm side of the insulation a barrier is advantageous; on the cold side it is disadvantageous. When a moisture-repelling protective sheet is used on the cold side, it is essential to have a sheet of considerably greater—usually several times greater—vapor resistance on the warm side.

The blanket type of insulation can be installed near the center of certain types of wall space so as to leave a continuous air space for ventilation on the cold side. For old houses, in which it is difficult to install barrier sheets next to the insulation, the use of two coats of aluminum paint on the inside wall surface has been recommended by some investigators.

In insulated attics the situation is quite different. For insulation on the attic floor, ventilation with attic window louvres may take care of many cases so as to avoid condensation of moisture on the under side of the roof, but in some cases vapor barriers are needed in addition to ventilation. If the insulation is placed close to the roof, it becomes much more difficult to ventilate the space between, and recourse to effective vapor barriers becomes especially necessary. An additional factor is that some modern roofs, such as the metal and built-up types, are made of materials with very high vapor resistance. For these it becomes much harder to get a vapor barrier on the warm side with vapor resistance several times as great as that of the roof. In such cases attempts to provide both adequate ventilation and vapor barriers would appear necessary.

Further discussions of the problem of condensation in insulated walls will be found in a number of the publications referred to at the end of the paper.

IV. CONCLUSIONS

The available data on the moisture permeability of various building materials and the more modern types of structures are too meager and discordant to permit any more than a very rough estimate of the conditions under which condensation will take place in insulated walls. It is possible, however, in the case of many types of wall to calculate for any given condition of humidity and temperature the ratio between the moisture permeabilities of the interior and exterior portions of the wall which is necessary to prevent condensation. For exterior and interior conditions of temperature and humidity which do not seem impossibly severe, it is necessary in a well-insulated wall to have the vapor resistance of the warm side of the wall several times as great as that on the cold side in order to prevent the possibility of condensation. The extent to which air leakage into a wall from the outside is significantly advantageous is unknown, but any such leakage will decrease the tendency for condensation.

V. REFERENCES

- [1] S. T. C. Stillwell, *The movement of moisture with reference to timber seasoning*. Forest Products Research, Dept. Sci. Ind. Research, Great Britain Tech. Papers No. 1 (1926).
- [2] J. F. Martley, *Moisture movement through wood; the steady state*. Forest Products Research, Dept. Sci. Ind. Research, Great Britain Tech. Papers No. 2 (1926).
- [3] R. I. Wray and A. R. Van Vorst, *Permeability of paint films to moisture*. Ind. Eng. Chem. **25**, 842 (August 1933).
- [4] R. L. Taylor, D. B. Herrmann, and A. R. Kemp, *Diffusion of water through insulating materials*. Ind. Eng. Chem. **28**, 1255 (November 1936).
- [5] F. B. Rowley, A. B. Algren, and C. E. Lund, *Condensation within walls*. Heating, Piping, Air Conditioning **10**, 49 (January 1938).
- [6] J. D. Babbitt, *The permeability of building materials to water vapor*. Heating, Piping, Air Conditioning **10**, 751 (November 1938).
- [7] L. G. Miller, *Calculating vapor and heat transfer through walls*. Heating and Ventilating **35**, No. 11, 56 (November 1938).

- [8] J. D. Babbitt, *The diffusion of water vapour through various building materials*. Canadian J. Research **17**, 15 (February 1939).
- [9] L. V. Teesdale, *Resistance of materials to vapor transmission*. Heating, Piping, Air Conditioning **11**, 213 (April 1939).
- [10] F. B. Rowley, A. B. Algren, and C. E. Lund, *Condensation of moisture and its relation to building construction and operation*. Heating, Piping, Air Conditioning **11**, 41 (January 1939).
- [11] L. V. Teesdale, *How to overcome condensation in building walls and attics*. Heating and Ventilating **36**, No. 4, 36 (April 1939).
- [12] L. V. Teesdale, *Condensation in walls and attics*. R1157. U. S. Department of Agr., Forest Service, Forest Products Laboratory, Madison, Wis.
- [13] L. V. Teesdale, *Condensation problems in farm buildings*. R1186. U. S. Department of Agr., Forest Service, Forest Products Laboratory, Madison, Wis.
- [14] L. V. Teesdale, *Condensation problems in modern buildings*. R1196. U. S. Department of Agr., Forest Service, Forest Products Laboratory, Madison, Wis.
- [15] J. D. Babbitt, *The permeability of building papers to water vapour*. Canadian J. Research **18**, 90 (May 1940).
- [16] J. D. Babbitt, *Observations on the permeability of hygroscopic materials to water vapour. I Observations at relative humidities less than 75%*. Canadian J. Research **18**, 105 (June 1940).

WASHINGTON, August 9, 1940.

BUILDING MATERIALS AND STRUCTURES REPORTS

On request, the Superintendent of Documents, U. S. Government Printing Office, Washington, D. C., will place your name on a special mailing list to receive notices of new reports in this series as soon as they are issued. There will be no charge for receiving such notices.

An alternative method is to deposit with the Superintendent of Documents the sum of \$5.00, with the request that the reports be sent to you as soon as issued, and that the cost thereof be charged against your deposit. This will provide for the mailing of the publications without delay. You will be notified when the amount of your deposit has become exhausted.

If 100 copies or more of any report are ordered at one time, a discount of 25 percent is allowed.

Send all orders and remittances to the *Superintendent of Documents, U. S. Government Printing Office, Washington, D. C.*

The following publications in this series are available by purchase from the Superintendent of Documents at the prices indicated:

| | | |
|-------|--|-----|
| BMS1 | Research on Building Materials and Structures for Use in Low-Cost Housing----- | 10¢ |
| BMS2 | Methods of Determining the Structural Properties of Low-Cost House Constructions... 10¢ | 10¢ |
| BMS3 | Suitability of Fiber Insulating Lath as a Plaster Base----- | 10¢ |
| BMS4 | Accelerated Aging of Fiber Building Boards----- | 10¢ |
| BMS5 | Structural Properties of Six Masonry Wall Constructions----- | 15¢ |
| BMS6 | Survey of Roofing Materials in the Southeastern States----- | 15¢ |
| BMS7 | Water Permeability of Masonry Walls----- | 10¢ |
| BMS8 | Methods of Investigation of Surface Treatment for Corrosion Protection of Steel----- | 10¢ |
| BMS9 | Structural Properties of the Insulated Steel Construction Co.'s "Frameless-Steel" Constructions for Walls, Partitions, Floors, and Roofs----- | 10¢ |
| BMS10 | Structural Properties of One of the "Keystone Beam Steel Floor" Constructions Spon- sored by the H. H. Robertson Co----- | 10¢ |
| BMS11 | Structural Properties of the Curren Fabrihome Corporation's "Fabrihome" Construc- tions for Walls and Partitions----- | 10¢ |
| BMS12 | Structural Properties of "Steelox" Constructions for Walls, Partitions, Floors, and Roofs Sponsored by Steel Buildings, Inc----- | 15¢ |
| BMS13 | Properties of Some Fiber Building Boards of Current Manufacture----- | 10¢ |
| BMS14 | Indentation and Recovery of Low-Cost Floor Coverings----- | 10¢ |
| BMS15 | Structural Properties of "Wheeling Long-Span Steel Floor" Construction Sponsored by the Wheeling Corrugating Co----- | 10¢ |
| BMS16 | Structural Properties of a "Tilecrete" Floor Construction Sponsored by Tilecrete Floors, Inc----- | 10¢ |
| BMS17 | Sound Insulation of Wall and Floor Constructions----- | 10¢ |
| BMS18 | Structural Properties of "Pre-Fab" Constructions for Walls, Partitions, and Floors Sponsored by the Harnischfeger Corporation----- | 10¢ |
| BMS19 | Preparation and Revision of Building Codes----- | 15¢ |
| BMS20 | Structural Properties of "Twachtman" Constructions for Walls and Floors Sponsored by Connecticut Pre-Cast Buildings Corporation----- | 10¢ |
| BMS21 | Structural Properties of a Concrete-Block Cavity-Wall Construction Sponsored by the National Concrete Masonry Association----- | 10¢ |
| BMS22 | Structural Properties of "Dun-Ti-Stone" Wall Construction Sponsored by the W. E. Dunn Manufacturing Co----- | 10¢ |
| BMS23 | Structural Properties of a Brick Cavity-Wall Construction Sponsored by the Brick Manufacturers Association of New York, Inc----- | 10¢ |
| BMS24 | Structural Properties of a Reinforced-Brick Wall Construction and a Brick-Tile Cavity- Wall Construction Sponsored by the Structural Clay Products Institute----- | 10¢ |
| BMS25 | Structural Properties of Conventional Wood-Frame Constructions for Walls, Partitions, Floors, and Roofs----- | 15¢ |
| BMS26 | Structural Properties of "Nelson Pre-Cast Concrete Foundation" Wall Construction Sponsored by the Nelson Cement Stone Co., Inc----- | 10¢ |
| BMS27 | Structural Properties of "Bender Steel Home" Wall Construction Sponsored by The Bender Body Co----- | 10¢ |
| BMS28 | Backflow Prevention in Over-Rim Water Supplies----- | 10¢ |
| BMS29 | Survey of Roofing Materials in the Northeastern States----- | 10¢ |
| BMS30 | Structural Properties of a Wood-Frame Wall Construction Sponsored by the Douglas Fir Plywood Association----- | 10¢ |
| BMS31 | Structural Properties of "Insulite" Wall and "Insulite" Partition Constructions Spon- sored by The Insulite Co----- | 15¢ |
| BMS32 | Structural Properties of Two Brick-Concrete-Block Wall Constructions and a Concrete- Block Wall Construction Sponsored by the National Concrete Masonry Association.. | 10¢ |

[List continued on cover page iv]

BUILDING MATERIALS AND STRUCTURES REPORTS

[Continued from cover page III]

| | | |
|-------|--|-----|
| BMS33 | Plastic Calking Materials----- | 10¢ |
| BMS34 | Performance Test of Floor Coverings for Use in Low-Cost Housing: Part 1----- | 10¢ |
| BMS35 | Stability of Sheathing Papers as Determined by Accelerated Aging----- | 10¢ |
| BMS36 | Structural Properties of Wood-Frame Wall, Partition, Floor, and Roof Constructions With "Red Stripe" Lath Sponsored by The Weston Paper and Manufacturing Co.-- | 10¢ |
| BMS37 | Structural Properties of "Palisade Homes" Constructions for Walls, Partitions, and Floors, Sponsored by Palisade Homes----- | 10¢ |
| BMS38 | Structural Properties of Two "Dunstone" Wall Constructions Sponsored by the W. E. Dunn Manufacturing Co----- | 10¢ |
| BMS39 | Structural Properties of a Wall Construction of "Pfeifer Units" Sponsored by the Wis- consin Units Co----- | 10¢ |
| BMS40 | Structural Properties of a Wall Construction of "Knap Concrete Wall Units" Sponsored by Knap America, Inc----- | 10¢ |
| BMS41 | Effect of Heating and Cooling on the Permeability of Masonry Walls----- | 10¢ |
| BMS42 | Structural Properties of Wood-Frame Wall and Partition Constructions With "Celotex" Insulating Boards Sponsored by The Celotex Corporation----- | 10¢ |
| BMS43 | Performance Test of Floor Coverings for Use in Low-Cost Housing: Part 2----- | 10¢ |
| BMS44 | Surface Treatment of Steel Prior to Painting----- | 10¢ |
| BMS45 | Air Infiltration Through Windows----- | 10¢ |
| BMS46 | Structural Properties of "Scot-Bilt" Prefabricated Sheet-Steel Constructions for Walls, Floors, and Roofs Sponsored by The Globe-Wernicke Co----- | 10¢ |
| BMS47 | Structural Properties of Prefabricated Wood-Frame Constructions for Walls, Partitions, and Floors Sponsored by American Houses, Inc----- | 10¢ |
| BMS48 | Structural Properties of "Precision-Built" Frame Wall and Partition Constructions Sponsored by the Homasote Co----- | 10¢ |
| BMS49 | Metallic Roofing for Low-Cost House Construction----- | 10¢ |
| BMS50 | Stability of Fiber Building Boards as Determined by Accelerated Aging----- | 10¢ |
| BMS51 | Structural Properties of "Tilecrete Type A" Floor Construction Sponsored by the Tile- crete Co----- | 10¢ |
| BMS52 | Effect of Ceiling Insulation Upon Summer Comfort----- | 10¢ |
| BMS53 | Structural Properties of a Masonry Wall Construction of "Munlock Dry Wall Brick" Sponsored by the Munlock Engineering Co----- | 10¢ |
| BMS54 | Effect of Soot on the Rating of an Oil-Fired Heating Boiler----- | 10¢ |
| BMS55 | Effects of Wetting and Drying on the Permeability of Masonry Walls----- | 10¢ |
| BMS56 | A Survey of Humidities in Residences----- | 10¢ |
| BMS57 | Roofing in the United States; Results of a Questionnaire----- | 10¢ |
| BMS58 | Strength of Soft-Soldered Joints in Copper Tubing----- | 10¢ |
| BMS59 | Properties of Adhesives for Floor Coverings----- | 10¢ |
| BMS60 | Strength, Absorption, and Resistance to Laboratory Freezing and Thawing of Building Bricks Produced in the United States----- | 15¢ |
| BMS61 | Structural Properties of Two Nonreinforced Monolithic Concrete Wall Constructions--- | 10¢ |
| BMS62 | Structural Properties of a Precast Joist Concrete Floor Construction Sponsored by the Portland Cement Association----- | 10¢ |
| BMS63 | Moisture Condensation in Building Walls----- | 10¢ |